 



How To Fit Your Roller Dual Shade Blinds

Carefully Unwrap The Blind And Its Associated Brackets.

There Are Two Bracket Options For Cassette Blinds, Face Fix And Top Fix.

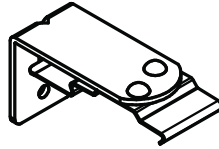

 Face Fix Bracket

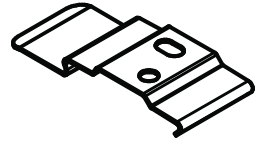

Top Fix Bracket

 
Fitting The Brackets

For A Blind Up To 1 Metre Wide Attach Two Brackets Fitted Approximately 75mm (3") From Each End Of The Blind. Any Intermediate Brackets Should Be Spaced Evenly Between These And As A General Rule: Up To 1m = 2 Brackets.


1M To 2M = 3 Brackets

2M To 3M = 4 Brackets


Over 3M = 5 Brackets

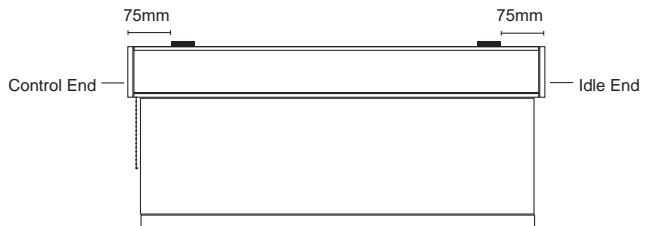

 The Bracket Release Lip On The Bracket Must Face The Back Of The Blind.

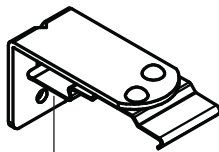

Release lip

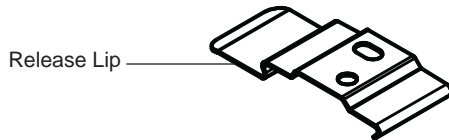 

Release lip

Mark The Hole Positions Before Drilling And Plugging If Necessary . Use Two Screws In Each Bracket Ensuring That The Brackets Are Level. Remember To Allow Room For The Blind To Clear Any Obstacles When Deployed, E.G. Door Or Window Handles.

Fitting The Cassette

Once All The Brackets Are In Place, Offer The Blind To The Brackets. With The Cassette Tilted Away From You Locate The Front Lip Into The Bracket And Push Upwards To Click The Cassette Into The Back Lip Of The Bracket.



Front lip



Front lip

Install The Child Safety Retainer

If Your Chain Has Been Fitted With A Chain Break-Away Child Safety Device, Then Step 6 Is Not Required.

ATTENTION:

Device Shall Be Installed At The Maximum Distance Possible From The Control Mechanism To Prevent The Looped Pull Cord (S) Becoming Slack . Please Ensure That There Are Sufficient Grounds For The Device To Be Permanently Fixed To. Always Install The Device As Per Instruction Provided.



WARNING



Children Can Strangle If This Safety Device Is Not Installed. Always Use This Device To Keep Cords Or Chains Out Of Reach Of Children.

